

Installation Guidelines for Root Barrier C3

JOINING PIECES OF ROOT BARRIER C3 TO FIT THE AREA YOU REQUIRE


Root Barrier C3 membrane comes in standard rolls (1.00, 1.50, 2.00, 3.00 and 4.00m x 25.00m plus 1.00 and 2.00m x 50.00m.). Therefore, it may be necessary to cut and join to achieve the shape you require.

Place the rolls of membrane adjacent to each other and overlap each one to make the join, or cut it into required size pieces (*if applicable*). These will need to be joined together, side-by-side with tape and glue.



Min 500mm overlap on each join

ROOT BARRIER C3 OVERLAPS

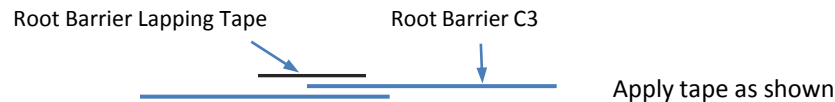


Note: The bitumen based Root Barrier Tape needs to be at least 5°C before applying.

If the tape does not adhere tightly to the root barrier membrane, carefully heat the surface of the tape with a blow lamp until it is evenly shiny (but not so hot that it smokes or curls excessively).


INSTALLATION

Horizontal

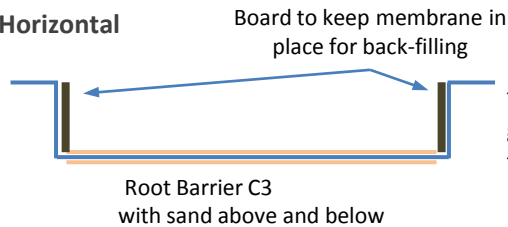

Place the Root Barrier C3 membrane in the hole up to ground level at the sides and leave at least 100mm along the ground. Lay 100mm of sand (or more as may be required to fully protect the membrane from any damage) on top of the membrane and place boards against the sides to stop it falling back, being dragged down or damaged whilst back-filling.

Vertical

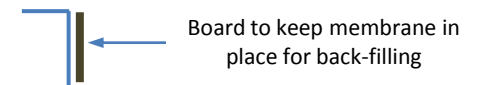


Note: The above information is of an illustrative nature only for your independent appraisal.

Hy-Tex (UK) Limited do not provide a design service, so all information is provided in good faith, but without warranty (express or implied)

Installation Guidelines for Root Barrier C3

SECURING ROOT BARRIER C3 TO A WALL

These are two options for securing Root Barrier C3 to a wall ...

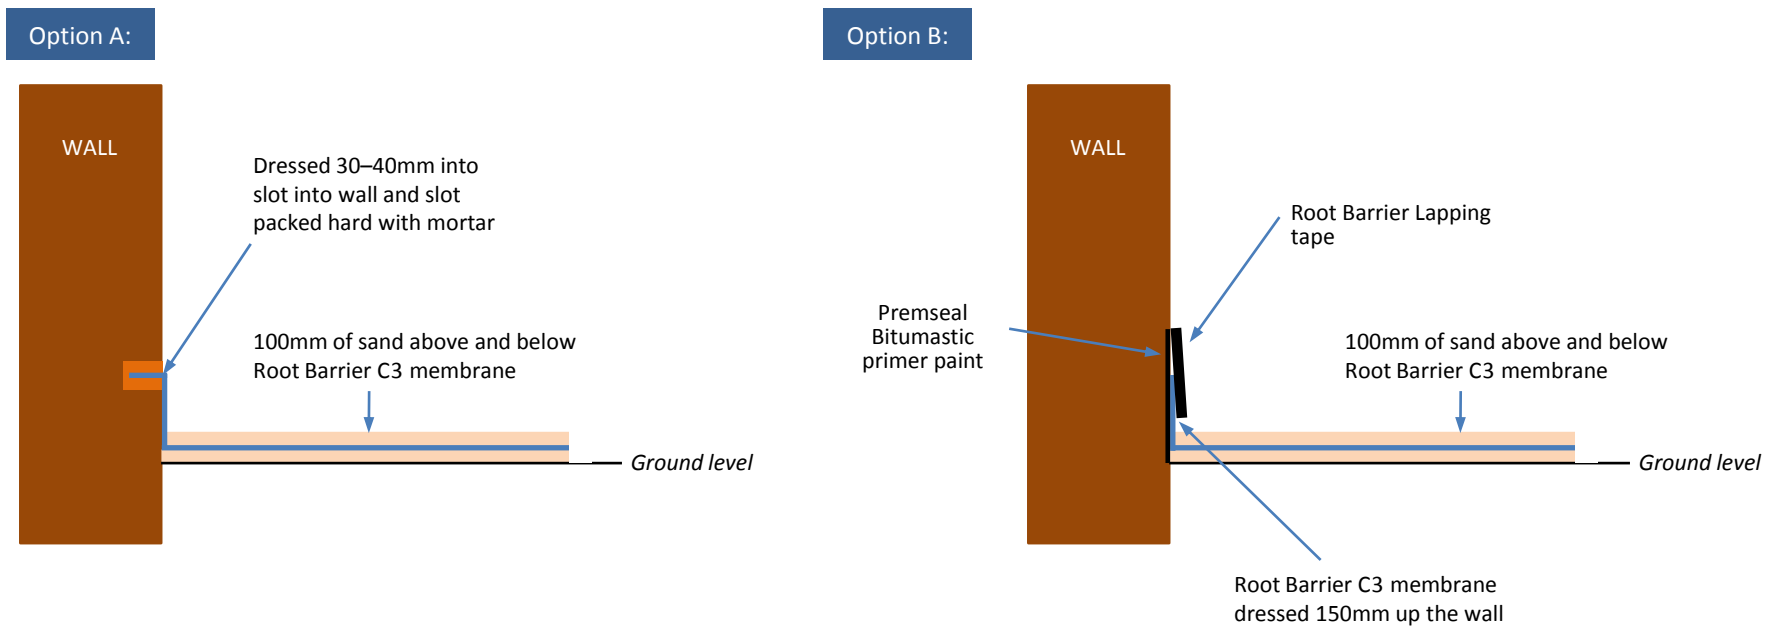


Note: The above information is of an illustrative nature only for your independent appraisal.

Hy-Tex (UK) Limited do not provide a design service, so all information is provided in good faith, but without warranty (express or implied)

Installation Guidelines for Root Barrier C3



INTERSECTING UNDERGROUND SERVICES

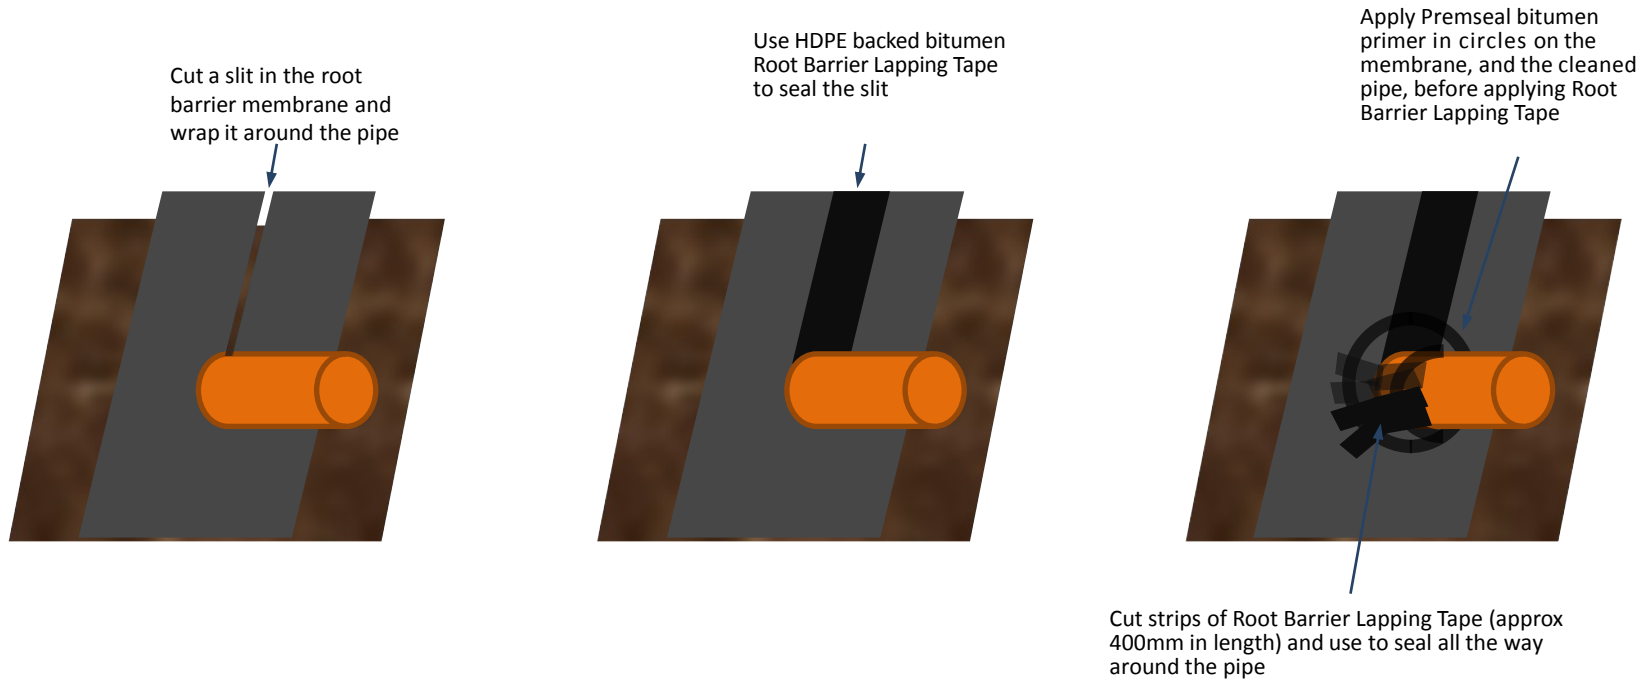

Note: The above information is of an illustrative nature only for your independent appraisal. Hy-Tex (UK) Limited do not provide a design service, so all information is provided in good faith, but without warranty (express or implied)

Installation Guidelines for Root Barrier C3

FINISHING TOP EDGE OF ROOT BARRIER C3

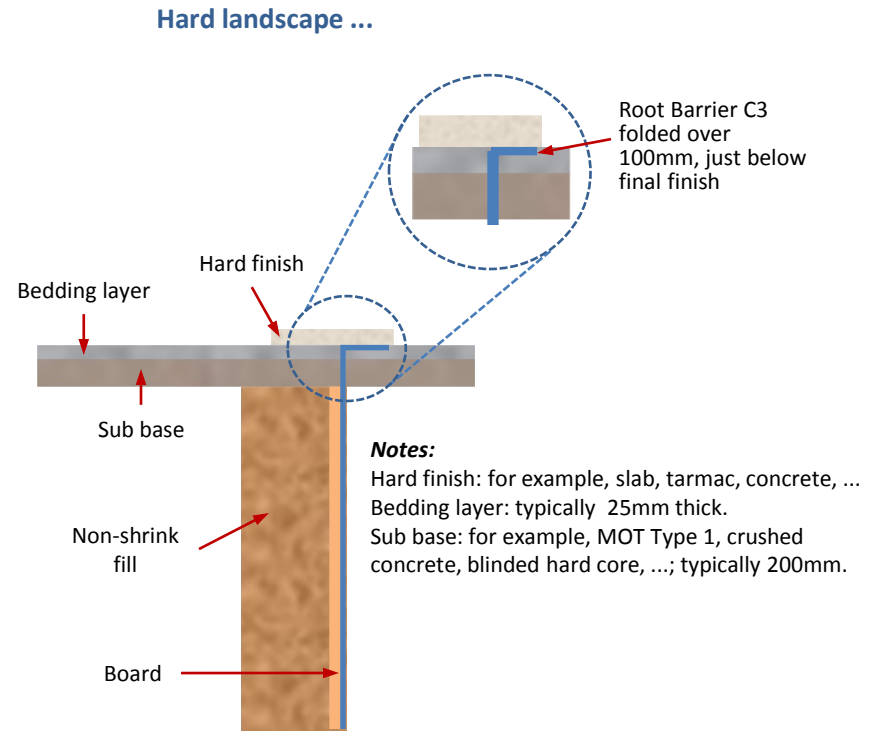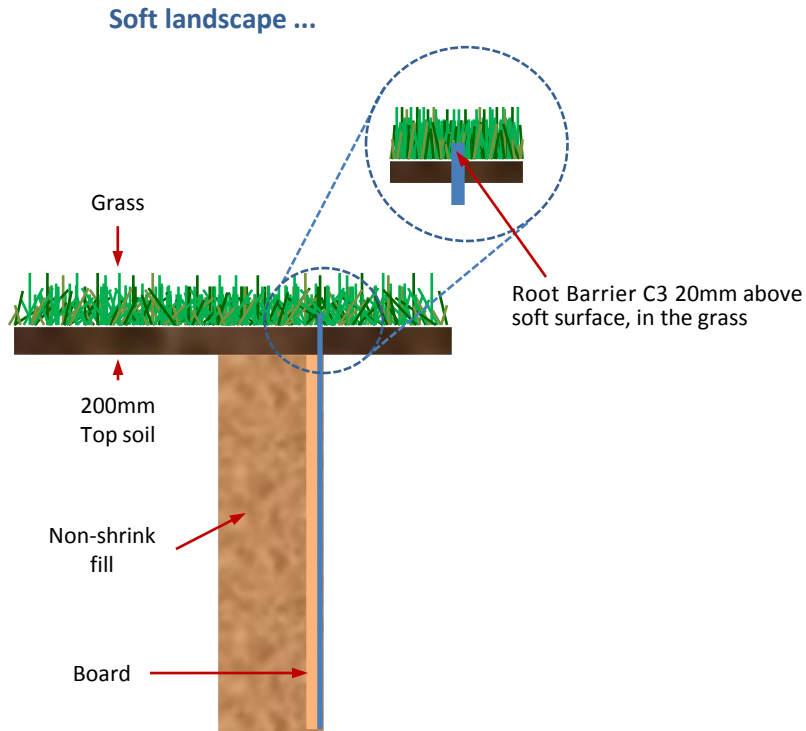

Note: The above information is of an illustrative nature only for your independent appraisal.
Hy-Tex (UK) Limited do not provide a design service, so all information is provided in good faith, but without warranty (express or implied)