


OVERLAP JOINING TECHNIQUE



Overlap each sheet of Plantex Platinum membrane by 0.3m

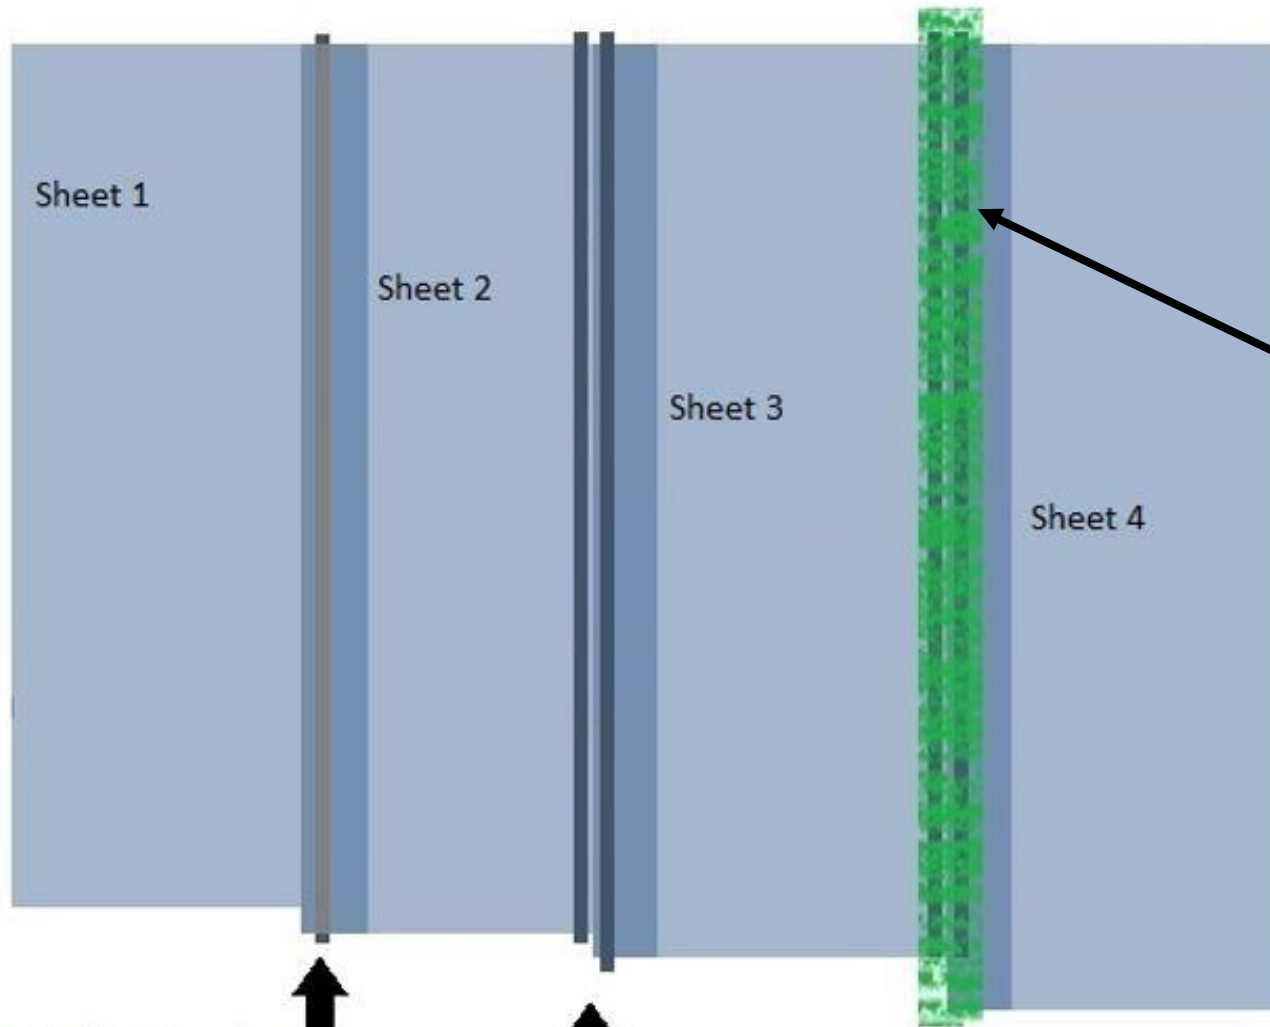

1 Single strip of tape between the overlap

2 Double strip of tape over the joint

3 Strip of Platinum over the joint edge

This top strip of DuPont™ Plantex® Platinum should be cut from the main roll and should be of sufficient width to cover the two strips of DuPont™ Butyl double sided tape.

The adjacent 3 stages of creating this system joint must be applied to each and every membrane lap joint